

8	FF99	00 - 99	Strobe begin after 1 , speed from slow to fast , selecting colors by RGBU.
9	F000	000 - 255	000-128 : 0-360°rotation selected ; 129-190 : Forward,speed from slow to fast; 191-255 : Reversion,speed from slow to fast;
10	CC99	00 - 99	Rainbow hop , from slow to fast.
11	DE99	00 - 99	Rainbow gradual change ,from slow to fast.
12	SH 1	1 - 3	SH 1: Quick Auto Program ; SH 2: Slow Auto Program 2 ; SH 3: Slow Auto Program ;
13	SU00	00 - 99	Sound, sensitivity from low to high

Table (1) digital display window function table

## 6 Pcs Led Bee Eye



### instructions

Please read the instructions carefully before use.

1、 Channel Instruction

1.1 5 CH Mode

Channel	Function	Instruction
CH1	R Dimming	R Dimming , from dark to light
CH2	G Dimming	G Dimming , from dark to light
CH3	B Dimming	B Dimming , from dark to light
CH4	W Dimming	W Dimming , from dark to light
CH5	Rotation site	000-128 : 0-360°rotation selected ; 129-190 : Forward , from slow to fast ;

1.2 6 CH Mode

Channel	Function	Instruction
CH1	Sum Dimming	R、 G、 B、 W Sum Dimming , from dark to light
CH2	R Dimming	R Dimming , from dark to light
CH3	G Dimming	G Dimming , from dark to light
CH4	B Dimming	B Dimming , from dark to light
CH5	W Dimming	W Dimming , from dark to light
CH6	Rotation site	000-128 : 0-360°rotation selected ; 129-190 : Forward , from slow to fast ; 191-255 : Reversion , from slow to fast ;

1.3 8 CH Mode (A001 Mode)

Channel	Function	Instruction
CH1	Sum Dimming	R、 G、 B、 W Sum Dimming , from dark to light
CH2	R Dimming	R Dimming , from dark to light
CH3	G Dimming	G Dimming , from dark to light
CH4	B Dimming	B Dimming , from dark to light
CH5	W Dimming	W Dimming , from dark to light
CH6	Sum Strobe	R、 G、 B、 W Sum Strobe , from slow to fast

CH7	Function Selected	000—025 : CH1-CH6 Control ; 026—050 : Color choice 051—100 : Hop , from slow to fast ; 101—150 : Gradual change,from slow to fast ; 151—200 : Quick Auto Program; 201—225 : Quick Auto Program 2; 226—250 : Slow Auto Program; 251—255: Sound , Sensitivity from low to high.
CH8	Rotation site	000-128 : 0-360°rotation selected ; 129-190 : Forward , speed from slow to fast ; 191-255 : Reversion , speed from slow to fast ;

2、 Key instruction:



MENU : Function key UP:Plus key DOWN : Minus Key

ENTER : Confirm Key

3、 Display Instruction

NO.	Detail	No. Rang	Function&Instruction
1	d001	001- 512	DMX512 Addressing code setting
2	CH05	05/06/08	5/6/8 Channel mode selected
3	T 30	00 - 99	Current temperature display
4	r255	000 - 255	Red dimming , from dark to light.
5	G255	000 - 255	Green dimming , from dark to light.
6	b255	000 - 255	Blue dimming , from dark to light.
7	u255	000 - 255	White dimming , from dark to light.