

# LED PAR 100W COB USER BOOK

## 1. PANEL:



A B C D

- A. MENU
- B. UP
- C. DOWN
- D. ENTER
- E. LED DISPLAY PANEL

USER DETAIL: PRESS BUTTON A THEN HAVE 8 EFFECTS, THE LED DISPLAY OF THE PRE TWO NUMBER IS STAND FOR THE STATUTE OF FUNCTION (NUMERICAL OF FUNCTION TABLE). THE LAST TWO NUMBER IS STAND FOR THE FUNCTION ADDRESS OR SPEED. PRESS BUTTON B/C THEN CAN CHANGE THE NUMERICAL. PRESS BUTTON D IS CONFIRM.

## 2. LED DISPLAY FUNCTION, (CHOOSE THE FUNCTION THE PRESS D)

NO.	DISPLAY	FUNCTION
1	A001	6CHANNEL ADD, (001—512) B、 C BUTTON IS UP/DOWN NUMERICAL
2	CC00	Color Jumping, (01—99) B、 C BUTTON IS CHANGE SPEED
3	CP00	Color PUSLE、 GRANDIENT, (01—99) B、 C BUTTON IS CHANGE SPEED
4	DE00	Color Run, (01—99) B、 C BUTTON IS CHANGE SPEED
5	BEBE	Color Sound
6	Y220	Warm Color, (000—255) B、 C BUTTON IS COLOR CHANGE
7	W220	White Color, (000—255) B、 C BUTTON IS COLOR CHANGE

### 3. DMX512 6Channel

NO	FUNCTION	Functional description
CH1	DIMMER	Y、W Dimmer, BRIGHT-
CH2	STROBE	Y、W Strobe, SLOW-FAST
CH3	FUNCTION	0—50: DMX 8CH; 51—100: JUMP; 101—150: GRANDIENT; 151—200: PUSLE; 201—255: SOUND
CH4	SPEED	SPEED SLOW-FAST
CH5	Y DIMMER	Y DIMMER,BRIGHT-
CH6	W DIMMER	W DIMMER,BRIGHT-

### 4. FUNCTION ADVANTAGE:

OPERATE IS EASY AND HUMANIZED DESIGN.BRIGHT IS NOT HAVE STROBE AND SHAKE.IT IS USE FOR STUDIO AND SO ON.