


LED PAR 100W COB USER BOOK

1. PANEL:

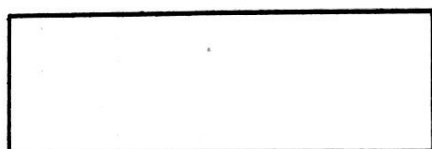

A B C D

- A. MENU
- B. UP
- C. DOWN
- D. ENTER
- E. LED DISPLAY PANEL

USER DETAIL: PRESS BUTTON A THEN HAVE 8 EFFECTS, THE LED DISPLAY OF THE PRE TWO NUMBER IS STAND FOR THE STATUTE OF FUNCTION (NUMERICAL OF FUNCTION TABLE). THE LAST TWO NUMBER IS STAND FOR THE FUNCTION ADDRESS OR SPEED. PRESS BUTTON B/C THEN CAN CHANGE THE NUMERICAL. PRESS BUTTON D IS CONFIRM.

2. LED DISPLAY FUNCTION, (CHOOSE THE FUNCTION THE PRESS D)

| NO. | DISPLAY | FUNCTION |
|-----|---------|--|
| 1 | A001 | 6CHANNEL ADD, (001—512) B、 C BUTTON IS UP/DOWN NUMERICAL |
| 2 | CC00 | Color Jumping, (01—99) B、 C BUTTON IS CHANGE SPEED |
| 3 | CP00 | Color PUSLE、 GRANDIENT, (01—99) B、 C BUTTON IS CHANGE SPEED |
| 4 | DE00 | Color Run, (01—99) B、 C BUTTON IS CHANGE SPEED |
| 5 | BE00 | Color Sound |
| 6 | Y220 | Warm Color, (000—255) B、 C BUTTON IS COLOR CHANGE |
| 7 | W220 | White Color, (000—255) B、 C BUTTON IS COLOR CHANGE |

PR LIGHT

3. DMX512 6Channel

| NO | FUNCTION | Functional description |
|-----|----------|---|
| CH1 | DIMMER | Y、W Dimmer, BRIGHT- |
| CH2 | STROBE | Y、W Strobe, SLOW-FAST |
| CH3 | FUNCTION | 0—50: DMX 8CH; 51—100: JUMP; 101—150: GRANDIENT; 151—200: PUSLE; 201—255: SOUND |
| CH4 | SPEED | SPEED SLOW-FAST |
| CH5 | Y DIMMER | Y DIMMER,BRIGHT- |
| CH6 | W DIMMER | W DIMMER,BRIGHT- |

4. FUNCTION ADVANTAGE:

OPERATE IS EASY AND HUMANIZED DESIGN.BRIGHT IS NOT HAVE STROBE AND SHAKE.IT IS USE FOR STUDIO AND SO ON.