



LED PAR USER MANUAL

1. LED Display

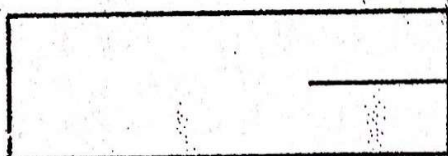

Display Window

 - A. MENU
- B. UP
- C. DOWN
- D. ENTER



A B C D

LED Display Function

(All function should be confirmed by pressing D: ENTER)

Item	Display Screen	Functions
1	D001	8CH (001—512) Press UP/DOWN to adjust value
2	CC80	Color jump change (01—99) Press UP/DOWN to adjust speed
3	CP80	Color pulse & gradual change (01 — 99) Press UP/DOWN to adjust speed
4	DE00	Color mixing change (01—99) Press UP/DOWN to adjust speed
5	BEBE	Color changes under sound active
6	R255	Red color (000—255) Press UP/DOWN to change value
7	G255	Green color (000—255) Press UP/DOWN to change value
8	B255	Blue color (000—255) Press UP/DOWN to change value
9	W255	White color (000—255) Press UP/DOWN to change value

2. DMX512 Channel Mode

Item	Function	Description
CH1	MAIN DIMMER	0-255: 0-100% linear dimmer
CH2	STROBE	0-2: NO 3-191: Pulse strobe from slow to fast 192-255: Random strobe from slow to fast
CH3	FUNCTIONS	0—50: DMX 51-100: Jump change 101—150: Gradual change 151-200: Pulse change 201—255: Color change via sound active
CH4	SPEED	0-255: From slow to fast
CH5	R dimmer	0-255: 0-100% liner dimmer
CH6	G dimmer	0-255: 0-100% liner dimmer
CH7	B dimmer	0-255: 0-100% liner dimmer
CH8	W dimmer	0-255: 0-100% liner dimmer

4. Master-slave Function

Every device can be setted as Master or Slave.

Master: Any status will be available under disconnection to DMX512 controller.

Slave: Light should be setted to D001 mode and address code must be 1