

ST-X6NG

LED UV LIGHTING





USER MANUAL

ShowTech

ST-X12NG

LED UV LIGHTING

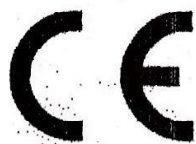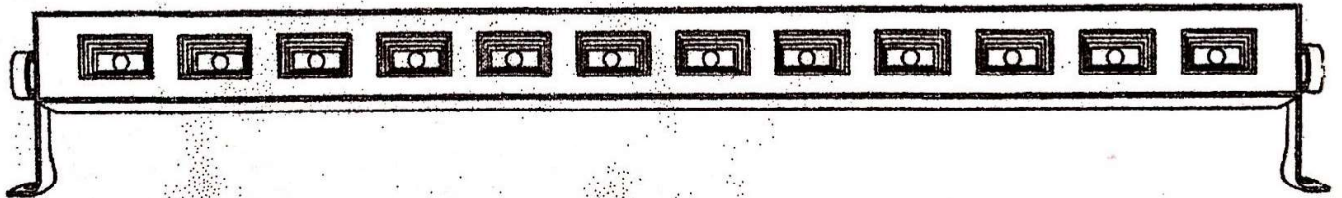

USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the LED Party UV Bar-9 the manual for future reference.

DANGER: To reduce the risk of electric shock and fire:

1. Always handle with caution, Always use tilt stand at ground level or mount for hanging on the ceiling etc.
2. Always unplug this unit from the electrical outlet before cleaning.
3. To avoid injury from falling parts, mount the LED Party UV Bar-9 securely with compatible screws only.
4. Keep all the ventilation holes at least 20mm away from all obstacles.
5. Always unplug from outlet first before putting on or taking off parts.
6. Close supervision and guidance is necessary when this LED Party UV Bar-9 is used by or near children.
7. Always use the LED Party UV Bar-9 only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
8. Never operate the LED Party UV Bar-9 if it has been damaged. This item will not work properly if it has been damaged or dropped into water.
9. Never operate the LED Party UV Bar-9 when vents are blocked. Keep ventilation holes away from all lint, hair, etc.
10. Never drop or insert any object into the openings.
11. This item is for indoor and household use only. Never use for outdoor purposes.
12. Keep the cord away from any heated surface.
13. The unit should only be used in moderate climates
14. Do not attempt to open the enclosure as it contains high voltage live wires.
15. LED flash is not replaceable. No user serviceable parts inside.
16. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
17. The minimum distance luminaire from that part of the luminaire or lamp to the lighted object is 0.2m

DISCONNECT DEVICE

Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

OPERATION

Plug the LED Party UV Bar-9 into an appropriate mains outlet that delivers a voltage of AC110-240V 50/60Hz.

Unplug the unit from the mains when you don't use it anymore.

SPECIFICATIONS

LED quantity: 6 x 3W UV LEDs
Power supply: AC110-220V 50/60Hz
Consumption 18W
Size: 36 x 5 x 5 cm
Net Weight: 0.7kg

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the LED Party UV Bar-12. Keep the manual for future reference.

DANGER: To reduce the risk of electric shock and fire:

1. Always handle with caution, Always use tilt stand at ground level or mount for hanging on the ceiling etc.
2. Always unplug this unit from the electrical outlet before cleaning.
3. To avoid injury from falling parts, mount the LED Party UV Bar-12 securely with compatible screws only.
4. Keep all the ventilation holes at least 20mm away from all obstacles.
5. Always unplug from outlet first before putting on or taking off parts.
6. Close supervision and guidance is necessary when this LED Party UV Bar-12 is used by or near children.
7. Always use the LED Party UV Bar-12 only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
8. Never operate the LED Party UV Bar-12 if it has been damaged. This item will not work properly if it has been damaged or dropped into water.
9. Never operate the LED Party UV Bar-12 when vents are blocked. Keep ventilation holes away from all lint, hair, etc.
10. Never drop or insert any object into the openings.
11. This item is for indoor and household use only. Never use for outdoor purposes.
12. Keep the cord away from any heated surface.
13. The unit should only be used in moderate climates
14. Do not attempt to open the enclosure as it contains high voltage live wires.
15. LED flash is not replaceable. No user serviceable parts inside.
16. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
17. The minimum distance luminaire from that part of the luminaire or lamp to the lighted object is 0.2m.

DISCONNECT DEVICE

Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

OPERATION

Plug the LED Party UV Bar-12 into an appropriate mains outlet that delivers a voltage of AC110-240V 50/60Hz.

Unplug the unit from the mains when you don't use it anymore.

SPECIFICATIONS

LED quantity:12 x 3W UV LEDs
Power supply: AC110-220V 50/60Hz
Consumption40W
Size:70 x 6.5 x 6.5 cm
Net Weight:0.7kg