

1-255 range adjust the green light, press the confirm to

Preservation

6: press the menu display B, then press the UP/DOWN button,

1-255 range adjust the blue light, press the confirm to

Preservation

6. wireless remote:

1. press (FOG) button----- only smoke;

2. press (R) button, RED led light and smoke;

3. press (G) button, GREEN led light and smoke;

4. press (B) button, BLUE led light and smoke;

7. DMX: Automatic priority DMX, Other features are not valid when

DMX, press the menu button, then press the UP, DOWN to set the

address code, press the confirm to **Preservation**

DMX channel:

1. smoke

2. R-LED

3. G-LED

4. B-LED

5. fast/slow flash

6. LED Multi function model (10 - 99) Gradient, (100 - 199)

jump (200 - 255) Pulse variable

7. LED Multi function model speed.

LCD display LED fog machine :

MANU UP DOWN
 On/off time& ration confirm

LCD display code :

- A 1-512 DMX address
- P 1-100 smoke
- R 0-255 red, light1-255 can adjust
- G 0-255 green, light1-255 can adjust
- B 0-255 blue, light1-255 can adjust

---- standby
- UP - heating

- 1.press the UP/DOWN button,, stop work
- 2.press the menu display P, then press the UP/DOWN button,
1-100range adjust, press the confirm to **Preservation**
- 3.DMX: press the menu display A, then press the UP/DOWN
button , 1-512range adjust, press the confirm to **Preservation**
- 4: press the menu display R, then press the UP/DOWN button,
1-255range adjust the red light , press the confirm to
Preservation
- 5: press the menu display G, then press the UP/DOWN button,