


# 400W Led Blind Light Instructions

## 1. The illustration part:

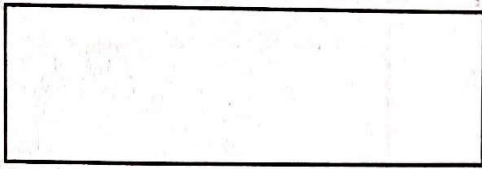

A B C D

A. Function key  
B. Additional key  
C. Reduction key  
D. OK key

Instructions: according to the function keys can cycle out several different functional effect, A digital tube in the first two digits represent the current function (see menu). After the two digits represent the function of. Address code. Or speed, parameters. Press B or C can modify the parameter values. Press the D key to confirm.

## 2. The LED display window function, (all function according to the selection and then press the D key to save)

display	function description
A001	Eight channel address code, (001—512) B, C key to add and subtract address code values
ADYE	Back to dmx 512 address
FF00	Auto mode with speed adjustment (00-99)
AU01	Color selection
EE00	Color fade with speed adjustment (00-99)
CC00	Color pulse with speed adjustment (00-99)
F000	Strobe from slow to fast (000-255)
S0UD	Strobe by sound
SUND	Color change by sound
R000	Lift 1 lamp dimmer(000-255)
G000	Lift 2 lamp dimmer(000-255)
B000	Right 1 lamp dimmer(000-255)
W000	Right 2 lamp dimmer (000-255)

## 3. DMX512 channel show

No.	value	description
Channel 1	1-255	dimmer
Channel 2	1-255	NO1 dimmer
Channel 3	1-255	NO2 dimmer
Channel 4	1-255	NO3 dimmer
Channel 5	1-255	NO4 dimmer
Channel 6	0-255	strobe
Channel 7	0-255	micro function
Channel 8	0-255	Function of speed, from slow to fast

## 4. functional characteristics:

Operation is very simple, humanized design, dimming flicker-free, dithering phenomenon, etc. Can adapt to photography, photography, television, etc Strict in lighting occasions