

OL-COB200-OUT COB Light



DMX MODE

 
2 Channels Mode

Channel	Function	Instruction
CH1	U Dimmer	White Dimmer- Dark to Bright
CH2	C Dimmer	Warm White Dimmer- Dark to Bright

6 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	Total Dimmer- Dark to Bright
CH2	U Dimmer	White Dimmer- Dark to Bright
CH3	C Dimmer	Warm White Dimmer- Dark to Bright
CH4	Total Strobe	Total Flash Strobe- Slow to Fast
CH5	Function Choice	000~050: CH1-CH6 Control. 051~100: Different Colors output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH6	Function/Speed	Slow to Fast (At the Colors output and sound choose the color)

KEYS INSTRUCTION



DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
1	d001	DMX address	001~512	2CH mode,UP,DOWN increase or reduce the value,
2	A001	DMX address	001~512	6CH mode UP,DOWN increase or reduce the value
3	S-SL	SL/FA	-	Dimmer speed change,SL-slow, fa-fast
4	d-Ho	Ho/oF	-	Dmx single set, ho-keep dmx single
5	U255	White dimmer	000~255	UP,DOWN Change brightness
6	C255	Warm white dimmer	000~255	UP,DOWN Change brightness
7	O255	White + warm white dimmer	000~255	UP,DOWN Change brightness
8	F255	Strobe	000-255	UP,DOWN change the speed
9	CC99	Colors Jump	01 ~15	UP,DOWN change the speed
10	DE99	Colors Gradate	01 ~ 15	UP,DOWN change the speed
11	CP99	Colors Pulse	01 ~ 15	UP,DOWN change the speed
12	SU01	Colors sound-Active	01~15	UP、DOWN Change the effects

Technical Reference:

Voltage: AC110-220V 50-60HZ

Power: 200W

Light source: led 200w white and warm white 2in1 cob

DMX Channels: 2/6 channel optional