LED Stage Lighting Operating Manual

LED PAR Light

USER MANUAL

Thank you so much to choose this product; it is adopting the most advanced lamps, which is called LED lamps. It conquers a lot of disadvantages such as power wasting, short using life, high temperature, etc. It has advantages of power saving, long life (it can reach 60,000.00 hours in general circs), high brightness, fresh colors...It is the best stage illuminating and various effect decorative products.

DMX512Control: 9 Channel Model(A001)

CH	Display	Function		
CH1	Dimmer	R、G、B、W、Ydimmer: from dark to bright		
CH2	R dimmer	R dimmer : from dark to bright		
CH3	G dimmer	G dimmer : from dark to bright		
CH4	B dimmer	B dimmer : from dark to bright		
CH5	W dimmer	W dimmer: from dark to bright		
CH6	Y dimmer	Y dimmer: from dark to bright		
CH7	Strobe	R、G、B、W、Y strobe: from slow to fast		
CH8	Function choice	0~50: DMX 8CH Control.		
		51~100: Different Colors Output		
		101~150: Colors Jump Change.		
		151~200: Colors Gradate.		
		201~250: Colors Pulse Change.		
		251~255: Sound-Active		
CH9	Function speed	Speed function, from slow to fast		

DMX512Control: 5 Channel Model(D001)

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
СНЗ	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright
CH5	Y Dimmer	Dimmer- Dark to Bright

Scanned with CamScanner

FUNCTION:

No	Show	Function	Instruction
1	A0,01	DMX Address (001~512)	DMX-512 address set, 9 Channels mode
2	d001	DMX Address (001~512)	DMX-512 address set, 5 Channels mode
3	r255	Red (000~255)	UP、DOWN Change brightness
4	G255	Green (000~255)	UP、DOWN Change brightness
5	b255	Blue (000~255)	UP、DOWN Change brightness
6	u255	white (000~255)	UP、DOWN Change brightness
7	Y255	yellow (000~255)	UP、DOWN Change brightness
8	FH00	Strobe flash (01~99)	UP, DOWN Change the speed
9	CL01	Different Colors Output (01~08)	UP, DOWN Change brightness
10	CC99	Colors Jump Change (01~99)	UP, DOWN Change the speed
11	DE99	Colors Gradate (01~99)	UP, DOWN Change the speed
12	CP99	Colors Pulse Change (01~99)	UP, DOWN Change the speed
13	SU01	Colors sound-Active (01~09)	UP, DOWN Change the effects

Scanned with CamScanner