 


LED Stage Lighting Operating Manual

Water-proof PAR Light

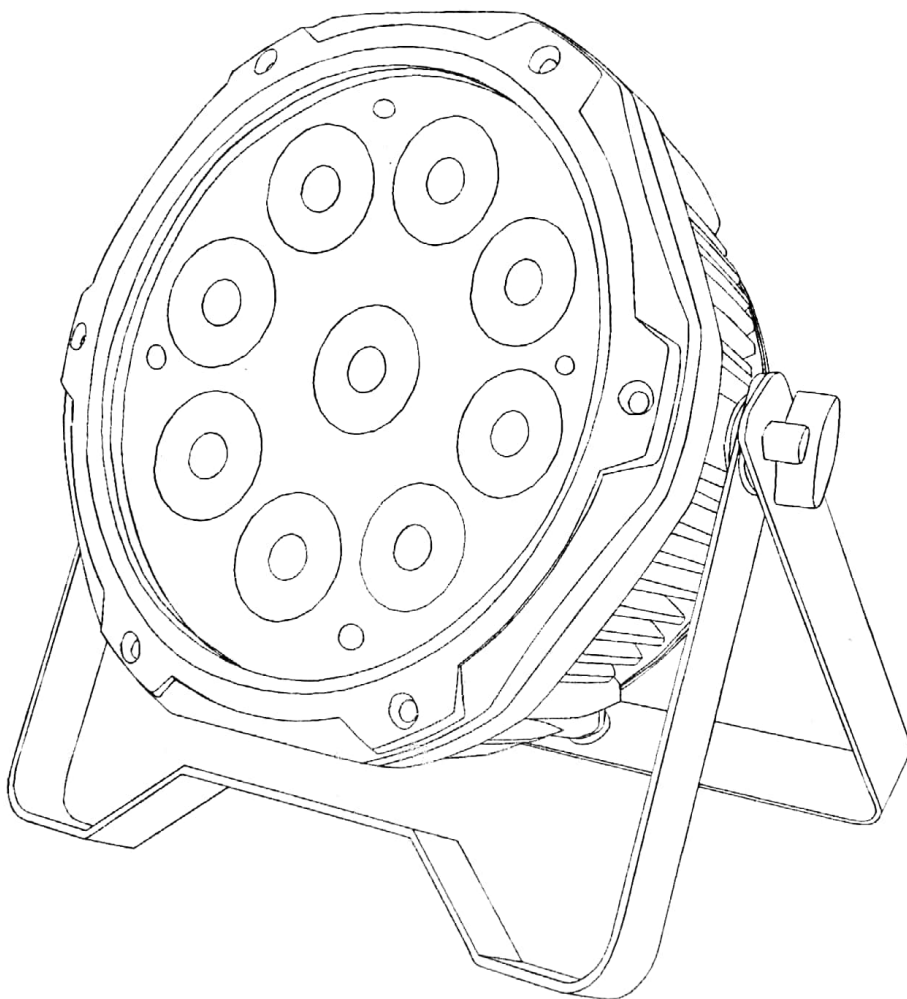

USER MANUAL



Installation and operating instructions :

(1) Plugged into a grounded power outlet .

(2) Install the equipment in a well-ventilated place at least 50cm from any surface, and ensure that the ventilation slots are not blocked.

(3) Disconnect the equipment from the power supply before any operation.

(4) The ambient temperature should not exceed 40°C, and the maximum ambient temperature is 45°C. Don't operate the device at higher temperatures.

(5) The equipment should be stopped immediately, if a fault occurs, and do not repair the equipment by yourself. Improper maintenance can result in damage and malfunction. Contact technical support for repair approval. Only the same accessories can be used with the original parts, and make sure the power cord is not blocked or damaged.

(6) Do not expose your eyes to light sources, which can be a sign of a seizure in sensitive people.

 
(7) The lamps are only used for decoration and not suitable for ordinary household lighting.

(8) Replacing the fuse: Unplug the device from the power supply, remove the fuse holder from its original position with a screwdriver, take out the burnt fuse, replace the fuse with the same characteristics, then re-rotate the screw, and connect the device to the power supply superior.

(9) **WARNING:** Stop using it if the fuse is still blowing after being replaced. Please contact customer support for further instructions, continued use may cause serious damage.

(10) Fix the equipment with the screw holes on the bracket to ensure that the equipment is firmly fixed to prevent vibration and movement during operation, and always check whether the structure of the equipment is strong enough to withstand equipment that is at least ten times.

(11) The equipment must be fixed by professionals in places that elders and children cannot reach, and no one can pass under or over the pedestrian crossing.

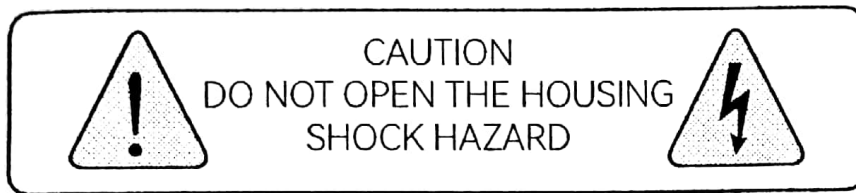

Please read this manual carefully before operating this product.

(12) End-of-life of the product: This sign indicates that this product should not be thrown into household waste in European Community countries and that waste should be recycled to support the sustainable recycling of resources in order to protect the environment and human health Utilize. If you need to recycle used electrical appliances, please go to an electrical appliance collection center or contact the dealer where you purchased the product to ensure the ecological recycling of the product.

(13).Before cleaning the device, disconnect it from the power source if connected. Do not use harsh cleaners. Wipe off dust or dirt from the product with a clean cloth. We are not responsible for damage caused by incorrect handling, improper use or wear and tear.

(14)We reserve the right to make technical modifications.

Please read this manual carefully before use

Note: this manual contains important information.
installation, operation according to requirement of manual.
Please save this manual for emergencies.

Startup steps for various modes

1. Automatic mode

Press "MENU" to find "CC99", "DE99", "CP99", to select one of the modes and press the "ENTER" key.

"Up" or "Down" key to start the automatic play speed adjustment. (Higher values are faster, lower values are slower)

2. Sound Mode

Press "MENU" to find "So01" and press "ENTER".

"Up" or "Down" key to select any effect between "So01" and "So08".

Technical Parameters

Voltage: AC110-220V 50/60HZ

Color: RGBWYP 6IN1 LEDs

 
Channel: 10/6CH

Operation: DMX512, Auto, Sound, Master-slave


Unpacking instructions

When you receive the device, open it and check whether the goods are complete. If not, please notify the carrier immediately and preserve the packaging, and if the damage is revealed, preserve the packaging and all packing materials for safe transportation of the device.

- 1 pcs lamps
- 1 instruction manual
- 1 Waterproof power cord
- 1 Waterproof DMX cord
- 2 handle and 2 knobs (installed on the machine)

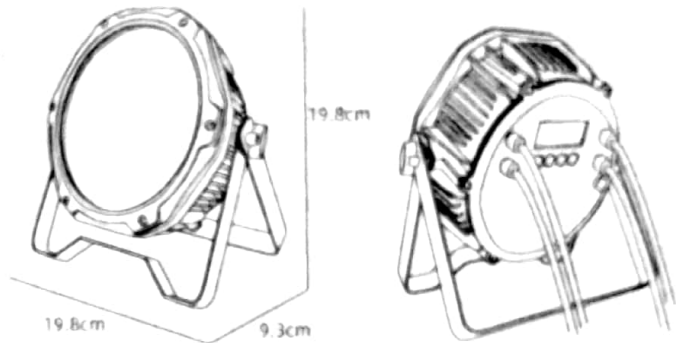


LED DISPLAY

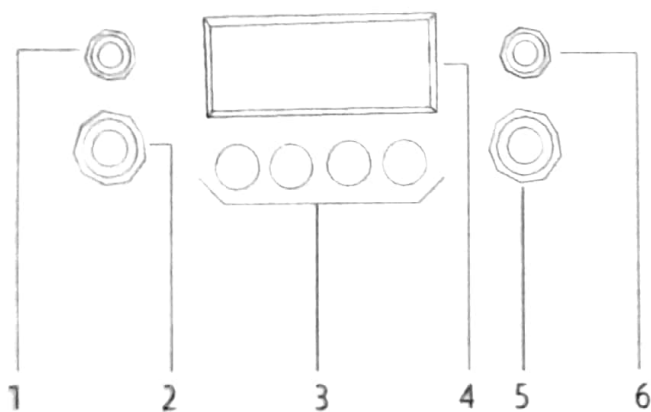 

- 1.DMX IN
- 2.POWER IN
- 3.Control buttons (MENU DOWN UP ENTER)
- 4.Display
- 5.POWER OUT
- 6.DMX OUT


Procedure for Installing support

 1

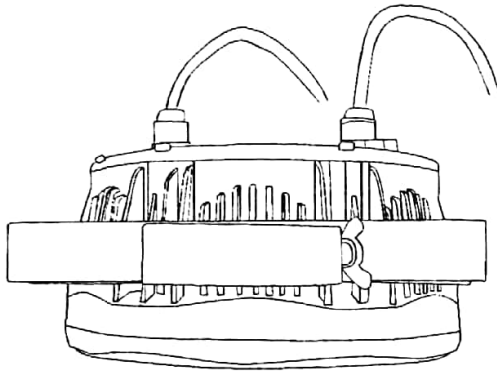


Install the bow bracket and fix it with screws

 2

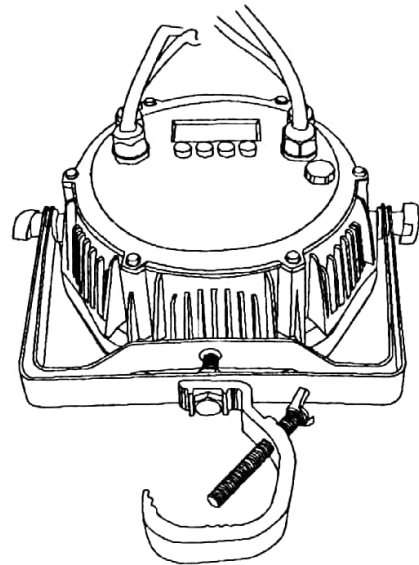


Install the bow bracket with the bow bracker

 3

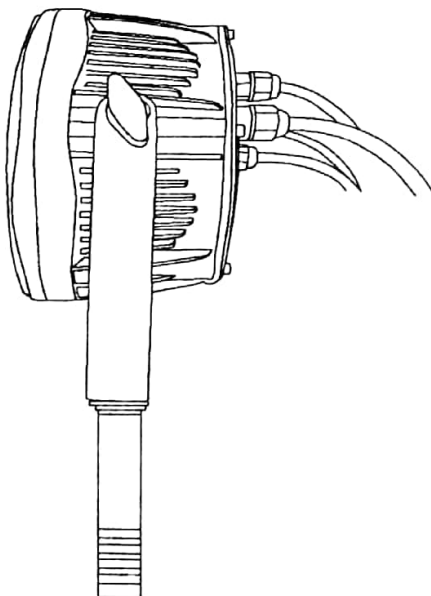

Confirm that the bracket position is installed correctly

 4

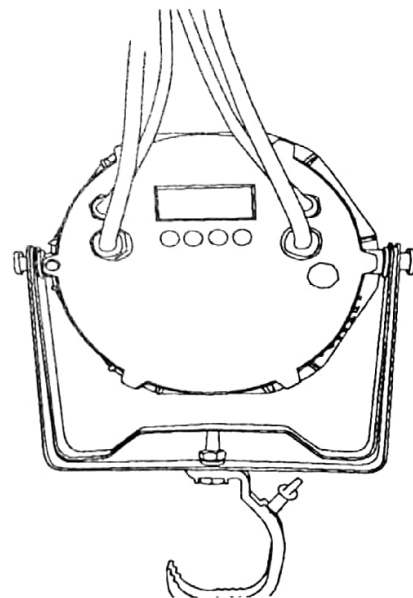

Position is installed successfully Confirm whether the bracket

 
Hook brackets are not included in the package

Console mode and master-slave mode:

DMX OUT to the DMX IN of the No. 1 fixture; DMX OUT of the No. 1 fixture is connected to the DMX IN of the No. 2 fixture;

Press "MENU" to find "Addr", press "ENTER", display "A001" press "Up" or "Down" to select the value of the console;

Master and slave settings: No. 1 light fixture is set to self-propelled or voice-activated function according to the startup mode; 2, 3, and 4**** are set to DMX512 mode: DMX address code is 001;

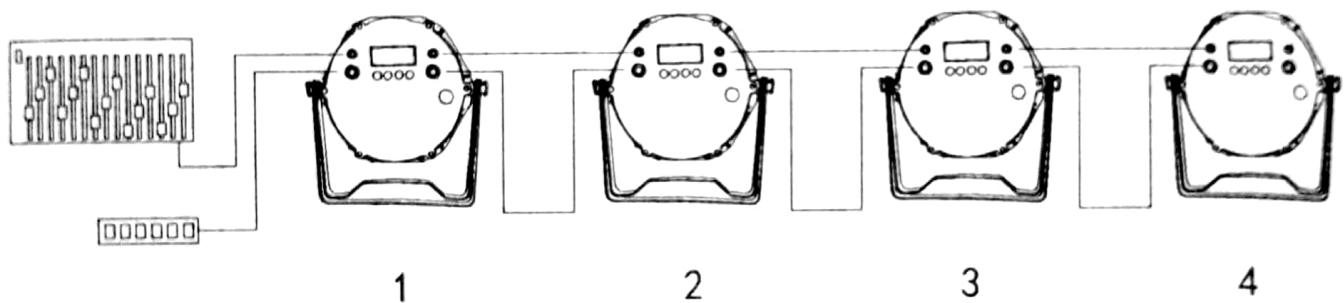

SPEISEKARTE

No	Show	Function	Instruction
1	A001	DMX Address (001~512)	DMX-512 address set, 8 Channels mode
2	d001	DMX Address (001~512)	DMX-512 address set, 4 Channels mode
3	R255	Red (000~255)	UP、DOWN Change brightness
4	G255	Green (000~255)	UP、DOWN Change brightness
5	B255	Blue (000~255)	UP、DOWN Change brightness
6	u255	white (000~255)	UP、DOWN Change brightness
7	FH00	Strobe flash (01~99)	UP、DOWN Change the speed
8	CL01	Different Colors Output (01~08)	UP、DOWN Change brightness
9	CC99	Colors Jump Change(01~99)	UP、DOWN Change the speed
10	DE99	Colors Gradate (01~99)	UP、DOWN Change the speed
11	CP99	Colors Pulse Change(01~99)	UP、DOWN Change the speed
12	SU01	Colors sound-Active(01~09)	UP、DOWN Change the effects

DMX 512-Steuerung

6Channel Model(D001)

CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright
CH5	Y Dimmer	Dimmer- Dark to Bright
CH6	P Dimmer	Dimmer- Dark to Bright

DMX 512-Steuerung

10 Channel Model(A001)

CH	Display	Function
CH1	Dimmer	R、G、B、W、Y、P dimmer : from dark to bright
CH2	R dimmer	R dimmer : from dark to bright
CH3	G dimmer	G dimmer : from dark to bright
CH4	B dimmer	B dimmer : from dark to bright
CH5	W dimmer	W dimmer: from dark to bright
CH6	Y dimmer	Y dimmer: from dark to bright
CH7	P dimmer	P dimmer: from dark to bright
CH8	Strobe	R、G、B、W、Y、P strobe: from slow to fast
CH9	Function choice	0~50: DMX 8CH Control. 51~100: Different Colors Output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH10	Function speed	Speed function, from slow to fast

