


# OL-COB300WP

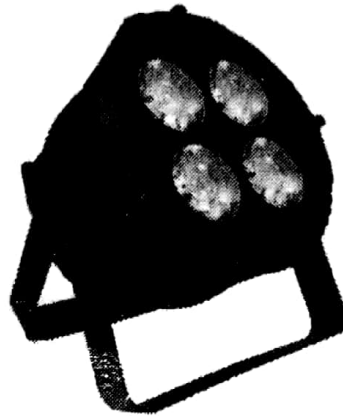

## DMX MODE

### 4 Channels Mode

Channel	Function	Instruction
CH1	W1 Dimmer	W1 Dimmer- Dark to Bright
CH2	WW1 Dimmer	WW1 Dimmer- Dark to Bright
CH3	W2 Dimmer	W2 Dimmer- Dark to Bright
CH4	WW2 Dimmer	WW2 Dimmer- Dark to Bright

### 8 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	Total Dimmer- Dark to Bright
CH2	W1 Dimmer	W1 Dimmer- Dark to Bright
CH3	WW1 Dimmer	WW1 Dimmer- Dark to Bright
CH4	W2 Dimmer	W2 Dimmer- Dark to Bright
CH5	WW2 Dimmer	WW2 Dimmer- Dark to Bright
CH6	Total Strobe	Total Flash Strobe- Slow to Fast
CH7	Function Choice	000~050: CH1-CH6 Control. 051~100: Different Colors output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH8	Function/Speed	Slow to Fast (At the Colors output and sound choose the color)

## KEYS INSTRUCTION



## DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
1	d001	DMX address	001~512	4CH mode
2	A001	DMX address	001~512	8CH mode
3	r255	W1 dim	000~255	UP,DOWN Change brightness
4	G255	WW1 dim	000~255	UP,DOWN Change brightness
5	b255	W2 dim	000~255	UP,DOWN Change brightness
6	u255	WW2 dim	000~255	UP,DOWN Change brightness
7	FH99	Strobe	01 ~ 99	UP,DOWN change the speed
8	CL01	Colors choose	01 ~ 08	UP,DOWN Change color
9	CC99	Colors Jump	01 ~ 99	UP,DOWN change the speed
10	DE99	Colors Gradate	01 ~ 99	UP,DOWN change the speed
11	CP99	Colors Pulse	01 ~ 99	UP,DOWN change the speed
12	SU01	Colors sound-Active	01~09	UP、DOWN Change the effects

## Technical Reference:

Voltage: AC110-220V 50-60HZ

Power: 200W

Light source: 4\*50W COB

DMX Channels: 4/8 channel combination optional

IP:IP65