


# 4PCS LED PAR LIGHT ST-COB300

# **USER MANUAL**

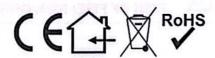

At first, thank you for purchasing the device. For the sake of safety and regular operation of this projector, please read this manual carefully before using and operating it in order to avoid any personal injury or damage to the device.

Scanned with CamScanner

#### WARNING

# FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!



CAUTION: Keep this equipment away from rain, moisture and liquids.



#### SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- •Be competent
- Follow the instructions of this manual



CAUTION: Take care using this equipment!

high voltage-risk of electric shock!!



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.







#### ATTENTION: DANGER OF LIFE! RISK OF BURNS!

RISK OF FIRE! RISK OF BURNS!

#### IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unatu horized modification to the equipment.

- Never let the power cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- NeVer remoVe warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the systems life.
- Only use the equipment indoors.
- Do notexpose to flammables ources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning!
  Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is II0-240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment ix dropped or damaged, disconnect the mains power supply immediately.
- Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g.after transportation) do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician.
  THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.

#### **OPERATING DETERMINATIONS**

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

In Correct operation may lead to danger e.g.:short-circuit,burns,electric shocks,lamp failure etc.

Do not endanger your own safety and the safety of others!Incorrect installation or use can cause serious damage to people and property.

#### You should find inside the LED carton the following items:

1. Stage Par 64 Unit 2. Power cable 3. InstruCtion manual

#### Technical Specifications:

DMX: Channels: 4/8 channels Voltage: AC100-240V~50/60Hz

#### Operating modes:


- Static color mode
   Color changing mode
   Color fade mode 4,Auto run mode
- 5. Sound active mode 6. Master slave mode 7. DMX mode

# Digital display operate:

a). Illustration part:

# **Operation Instructions:**

After startign press A(MENU) Enter into main-menu, Press B(UP) C(DOWN) to select the submenu, and then press D(ENTER)ensure.

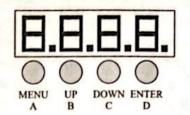

A.MENU B.UP C.DOWN D.ENTER

# b).LED Display Function table

D001	001-512	512 address setting 8-channel mode	
A001	001-512	512 address settings 4-channel mode	
Auxx	01	Warm White 1	
Madi ya 1	02	Warm White 2	
	03	White 1	
	04	White 2	
	05	Warm white	
	06	Warm white1+white1	
1	07	Color combination	
Secure 1	08	Quanliang	
	09	Color jumping	
1	Ten	Color gradient	
	So01	Voice-controlled jump	
20,000	So02	Voice-controlled strobe	
St00	St01	Automatic host without strobe	
	St16	Automatic host strobe speed from slow to fast	
SP00	SP01	A. A	
	SP16	Automatic host Au08 Au09 Au10 speeds from slow to fast	
Sn00	Sn01	Automotic host vales control and librity formal and for	
	Sn16	Automatic host voice control sensitivity from slow to f	
R000	R000	Many white 4 manimum helektares setting	
- series	R255	Warm white 1 maximum brightness setting	
G000	G000	War white 2 maximum halahtaan asti	
	G255	Warm white 2 maximum brightness setting	
B000	B000		
100 20 4	B255	White 1 maximum brightness setting	
W000	W000	units of a selection belobles and a selection of the sele	
	W255		
	\$09-99	Temperature display	

## C).DMX512 Channel Table:

# 4 Channels

NO.	Value	Function	Description
1	0-255	Warm white 1 dimmer	0-100%
2	0-255	Warm white 2 dimmer	0-100%
3	0-255	White 1 dimmer	0-100%
4	0-255	White 2 dimmer	0-100%

### 8 Channels

NO.	Value	Function	Description
1	0-255	Total dimming	0-100%
2	1-255	Warm white 1 dimmer	0-100%
3	0-255	Warm white 2 dimmer	0-100%
4	0-255	White 1 dimmer	0-100%
5	0-255	White 2 dimmer 0-100%	
6	0-255	Strobe Strobe from slow to fast	
7	0-255	Macro	Macro function
8	0-255	Speed/sensitivity	From slow to fast



CAUTION: Keep this equipment away from rain, moisture and liquids.



# Attention

◆ Keep the voltage of the power supply with the master light Do not connect with other electric cable and the DMX512 signal cable To ensure the earthing conductor of the switch well before connecting with AC110v~240v The earthing conductor is the yellow and green. When you move or install, to avoid the metal to knock the light








# ATTENTION: DANGER OF LIFE! RISK OF BURNS! RISK OF FIRE! RISK OF SHORT CIRCUIT!

## Notice:

- Be sure to follow figures 2 & 3 when making your own cables.
- Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing.
- Grounding the shield could cause a short circuit and erratic behaviour.

# **DMX Signal Connection**

3-Pin XLR to 5-Pin XLR Conversion					
Conductor	3-Pin XLR Female (OUT)	5-Pin XLR Male(IN)			
Ground/Shield	Pin 1	Pin 1			
Data Compliment (-signal)	Pin 2	Pin 2			
Data True (+signal)	Pin 3	Pin 3			
Not Used	War sum h To Allenda	Pin 4-Do Not Used			
Not Used		Pin 5-Do Not Used			

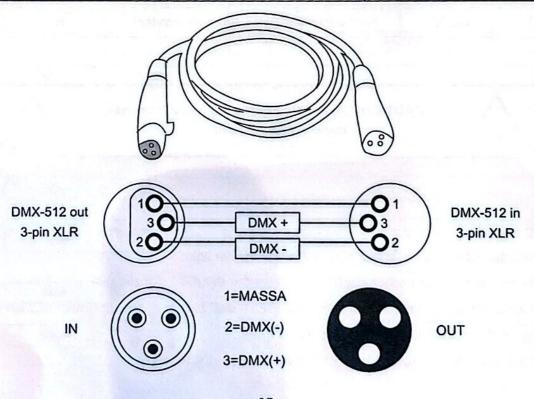

# MAINTENANCE

### Attention:

Periodical to maintain the par light
Check the screw of the spare parts in order to use well
Clearing the dust and fragments of the inner par light,
to keep the inner par light clearly
Clearing the lens
More dust, smoke and granular can cause appearance of the par
light corrosively, even cause overheated to damage equipment
Attention:Before take the light apart, please cut the power source.



CAUTION: Take care using this equipment!
high voltage-risk of electric shock!!



# Clearing

- ※ Cutting the power source when the light is cool, to move the cover of the light
- We using the vacuum cleaner or the gas from air compressor to remove the dust of the appearance of the par light
- ※ The lens need clearly once every week, otherwise to reduce the bright.
- X The fans need clear once every month, to promise the cool effect.
- X Clearing the lens must be take care, because the surface of the lens is easy to damage and cutting, and do not use the liquid to clean
- X The PCB do not use the liquid to clean, must be keep it dry, to avoid short circuit