

**PRODUCT: FOG MACHINE** 

**MODEL: MK-F06** 

# USER MANUAL











## 1. Introduction of functions

DMX channel Function (1 channel)

1 channel smoke spraying

Remote control function

1, Press any key of A, B, C and D to spray smoke, and release it to stop

### 2. Menu display instructions

If the DMX signal line is not connected, the display UP flashes as heating, and the completion of heating is solitaire display.

Connect the DMX signal line, and it shows that the address code flashes for heating, and the address code stops flashing when heating is completed.

Display shows:

R starts with DMX address code

P starts with the size of the puff.

DO05: This item represents the injection time in timing and quantification.

Set 5 to spray for 5 seconds and 7 to spray for 7 seconds.

1005: This item is the interval time in timing and quantification, and 5 is set as the interval of 5 seconds.

## 2

### 3. Description of key functions

MENU key

UP(+ key to manually spray smoke) key, press it twice continuously to work.

DOWN(- key timing and quantification) key ENTER key

## 4. Product parameter

- 1, voltage AC 220V 50HZ 110V 60Hz
- 2. Fuse 20A 30A
- 3, the power is 3000W W.
- 4. The preheating time is about 4 minutes.
- 5. Smoke spraying distance is 7m.
- 6. Smoke spraying time is 20S
- 7. In the state of automatic continuous smoke spraying, stop for about 7 seconds, spray for 7 seconds, consume about 700 ml of oil in 15 minutes, and consume 1 liter in 21 minutes and 30 seconds.
- 8, remote control type 4-key controllable range of 50 meters
- 9, DMX channel 1
- 10, oil bottle volume 5L
- 11, net weight 7.5KG
- 12, gross weight 9KG
- 13, machine size 29.5/25/27CM
- 14, packing size 55/31/33CM

#### 5. Product features

- 1. This machine has independently developed and designed its external structure, and its volume is small.
- 2. The main unit and the oil kettle can be installed separately, which saves installation space and makes refueling more convenient.
- 3. The appearance of this machine is upgraded, and it can be sprayed up, down, and directly. The angle of the ground can be adjusted by itself.
- 4. This machine can be installed by combining two machines, and the distance of smoke spraying is longer.

#### 6. Timing and quantitative explanation

- 1. After setting the duration of cigarette spraying and the interval duration, press DOWN(- key) to start the fixed-time quantitative work. It is still the fixed-time quantitative work to automatically remember when the machine is turned off.
- 2: To cancel the timing and quantification, press DOWN(- key) or MENU key again.
- 3: In the state of timing and quantification: the remote control is invalid and there is no response;

Plug in the DMX signal line, then follow the first choice of DMX, controlled by DMX, unplug the DMX signal line, and turn it off and turn it on again for automatic timing and quantification.

#### 7. Precautions for use

- 1. Use original special cigarette oil.
- 2. Clean oil pipeline regularly every month.
- 3. This machine is not equipped with rain-proof and waterproof conditions, so please contact the manufacturer in time for outdoor use.