



# Quick Installation Guide

## Magnetic Stripe Reader for 1515/1715L LCD Desktop Touchmonitor 1000 Series

© 2009 Tyco Electronics. All rights reserved.  
Elo TouchSystems, TE logo, and Tyco Electronics are trademarks.



[www.elotouch.com](http://www.elotouch.com)



Revision B  
P/N E208145

**North America**  
Elo TouchSystems  
301 Constitution Drive  
Menlo Park, CA 94025  
[www.elotouch.com](http://www.elotouch.com)  
1-800-557-1458

**Elo Technical Support**  
**Online self-help:**  
[www.elotouch.com/go/websupport](http://www.elotouch.com/go/websupport)  
**Technical Support contacts in your region:**  
[www.elotouch.com/go/contactsupport](http://www.elotouch.com/go/contactsupport)

**Europe**  
Tel +32 (0)16 35 21 00  
Fax +32 (0)16 35 21 01  
[elosales@elotouch.com](mailto:elosales@elotouch.com)

**Asia-Pacific**  
Tel +81 (45) 478-2161  
Fax +81 (45) 478-2180  
[www.tps.co.jp](http://www.tps.co.jp)

**Latin America**  
[www.elotouch.com.ar](http://www.elotouch.com.ar)

For current Elo news, product updates and announcements, register to receive our TouchMonitor newsletter at [www.elotouch.com/go/news](http://www.elotouch.com/go/news)



Our commitment. Your advantage.

# Magnetic Stripe Reader (MSR)

## Installation Instructions

1



Open the box containing the MSR kit.

2



Verify kit contents:

- ▶ MSR device with USB cable (1)
- ▶ Mounting screws (2)
- ▶ TouchTools Driver software CD (1)

3



Place monitor face down on a clean, soft and smooth surface.

4



Align and insert mounting screws into holes and tighten using a Philips screwdriver.

5



Attach USB cable from MSR device to the USB port on the rear of the computer.

6



Turn on power to the computer.